

Calibration for EB9321


1. Please find a Calibration Wire as below:




2. Connect to the Calibration PIN near the battery



3. Press the Calibration Key and hold it, turn on the scale.

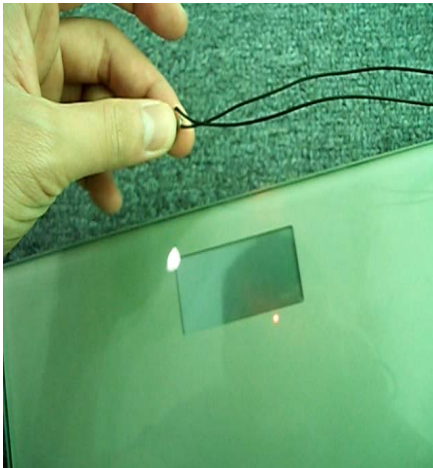

4. Now release the Calibration Key, and press it one times

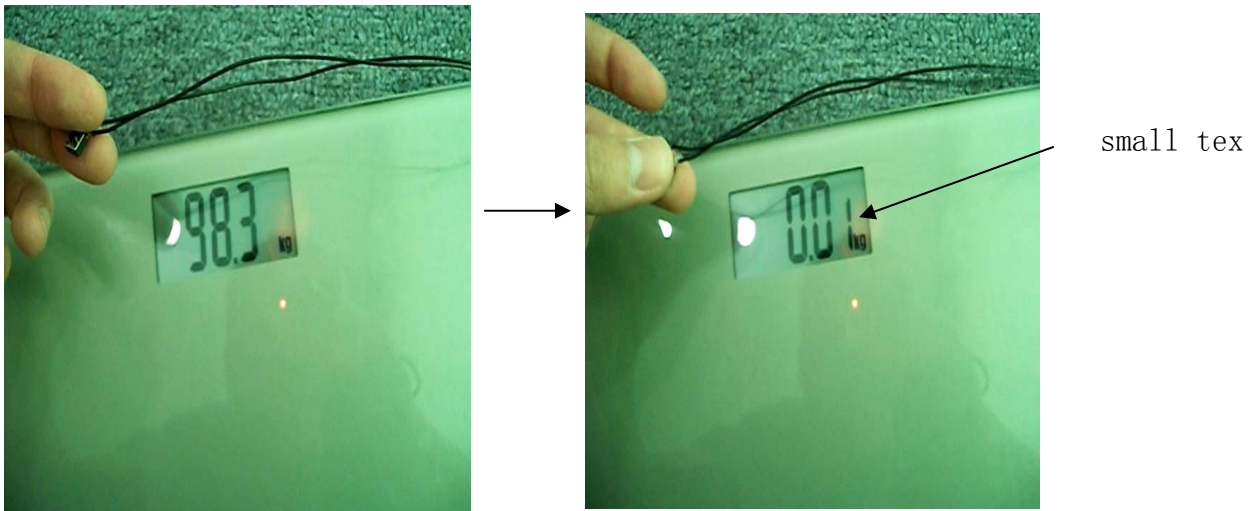

5. (1) Now please Load 40kg weight on the platform,
- (2) After small text turn as "2", please load more 60kg on the platfor
- (3) After small text turn as "3", Please load more 60kg on the platfor
- (4) LCD shows "F" or 160kg, it means finished the calibration,
Now please move away the weights carefully.

.t

m;

m.